

**BARRES ASYM. TRIQUES
A CHASSIS****3345A
3355A****Avertissement :**

Il convient de faire installer ce matériel par une personne qualifiée.
L'appareil doit être utilisé par une seule personne à la fois, sous la surveillance d'une personne qualifiée et avec des tapis de réception.
L'usage de cet appareil à des fins autres que celles initialement prévues est exclu.
Il est interdit d'utiliser le matériel lorsqu'il est sur son dispositif de déplacement, ou lorsque les pieds sont repliés.

Conformité :

Cet appareil répond aux exigences des normes européennes EN 913 "Matériel de gymnastique - Exigences générales de sécurité et méthodes d'essai" et EN 915 "Matériel de gymnastique - Barres asymétriques - Exigences fonctionnelles et de sécurité, méthodes d'essai - type 1".

Recommandations :

La norme française NF S 52-400 recommande de :

- conserver cette notice pour référence ultérieure (contrôle, entretien ...).
- effectuer une maintenance prédictive de manière périodique.
- mettre en place une vérification annuelle ou pluriannuelle selon l'utilisation.

Colisages :**Barres asymétriques à châssis avec pieds repliables Ref. 3345A :**

- 1 colis Ref. 326/02 paire de porte-mains, 2420 x 110 x 55 mm, 8 kg.
- 1 colis Ref. 327/00 montants (4), 2010 x 210 x 200 mm, 37 kg.
- 1 colis Ref. 333/99 écart+platines+brides, 690 x 190 x 190 mm, 22 kg.
- 1 colis Ref. 3355/02 bracons (2), 1670 x 30 x 50 mm, 5 kg.
- 1 colis Ref. 380/18 longerons (2), 2380 x 110 x 110 mm, 30 kg.
- 1 colis Ref. 391/20 pieds repliables (4), 2020 x 200 x 120 mm, 34 kg.
- 1 colis Ref. 3850 chariots (2), 500 x 280 x 110 mm, 13,5 kg.

Barres asymétriques à châssis avec pieds fixes Ref. 3355A :

- 1 colis Ref. 326/02 paire de porte-mains, 2420 x 110 x 55 mm, 8 kg.
- 1 colis Ref. 327/00 montants (4), 2010 x 210 x 200 mm, 37 kg.
- 1 colis Ref. 333/99 écart+platines+brides, 690 x 190 x 190 mm, 22 kg.
- 1 colis Ref. 3355/02 bracons (2), 1670 x 30 x 50 mm, 5 kg.
- 1 colis Ref. 380/18 longerons (2), 2380 x 110 x 110 mm, 30 kg.
- 1 colis Ref. 380/19 pieds fixes (2), 2020 x 200 x 120 mm, 34 kg.

Warning :

This equipment must be installed by a qualified person.
This equipment must be used by one person at a time under the supervision of a qualified person and with landing mats.
This equipment cannot be used for any other purpose than its initial purpose.
This equipment cannot be used when it is on the trolleys, or when its foot are folded.

Conformity :

This equipment is in accordance with the EN 913 norm "Gymnastics equipment - General safety requirements and test methods" and EN 915 norm "Gymnastics equipment - Asymmetric bars - Functional and safety requirements, test methods - type 1".

Recommendations :

The French norm NF S 52-400 advises :

- to preserve this sheet for ulterior needs (checking, maintenance ...).
- to make periodic preventive maintenances.
- to make checkings once a year or more frequently according to its use.

Packing detail : (according to the order)**Asymmetric bars with folding foot Ref. 3345A :**

- 1 package Ref. 326/02 pair of hand rails, 2420 x 110 x 55 mm, 8 kg.
- 1 package Ref. 327/00 uprights (4), 2010 x 210 x 200 mm, 37 kg.
- 1 package Ref. 333/99 spacer+plates+clamp, 690 x 190 x 190 mm, 22 kg.
- 1 package Ref. 3355/02 braces (2), 1670 x 30 x 50 mm, 5 kg.
- 1 package Ref. 380/18 base pieces (2), 2380 x 110 x 110 mm, 30 kg.
- 1 package Ref. 391/20 folding foot (4), 2020 x 200 x 120 mm, 34 kg.
- 1 package Ref. 3850 trolleys (2), 500 x 280 x 110 mm, 13,5 kg.

Asymmetric bars with fixed foot Ref. 3355A :

- 1 package Ref. 326/02 pair of hand rails, 2420 x 110 x 55 mm, 8 kg.
- 1 package Ref. 327/00 uprights (4), 2010 x 210 x 200 mm, 37 kg.
- 1 package Ref. 333/99 spacer+plates+clamp, 690 x 190 x 190 mm, 22 kg.
- 1 package Ref. 3355/02 braces (2), 1670 x 30 x 50 mm, 5 kg.
- 1 package Ref. 380/18 base pieces (2), 2380 x 110 x 110 mm, 30 kg.
- 1 package Ref. 380/19 fixed foot (2), 2020 x 200 x 120 mm, 34 kg.



Montage de l'appareil :

1) assembler le châssis comme en I. Veiller à placer les trous "O" à l'intérieur du châssis et vers le bas, comme en II, pour le montage du chariot (voir notice n°21 fournie avec le chariot Ref. : 3850).

2) fixer les chapes comme en I, serrer fortement les fixations.

3) monter le reste de l'appareil comme en III. Ôter les bouchons des montants hauts puis fixer les bracons en utilisant les trous A de chaque extrémité comme indiqué en IV. Les autres trous servent à obtenir un écartement des porte-mains plus important que la norme EN 915.

NOTA : placer les vis de fixation à l'intérieur et les écrous à l'extérieur. Serrer fortement toutes les fixations.

Instructions d'utilisation :

Règlage en hauteur des porte-mains :

Porte-mains haut de 2,10 à 2,45 m.

Porte-mains bas de 1,40 à 1,75 m.

Règlage en Écartement des porte-mains :

Ecartement des porte-mains de 0,565 à 1,40 m.

NOTA : la valeur d'écartement doit être impérativement identique pour les 2 écarteurs.

Il est possible d'obtenir des valeurs d'écartement jusqu'à 1,55 m en fixant les bracons sur les trous B (les 2 bracons doivent impérativement être montés de la même façon).

Maintenance :

Vérifier régulièrement le serrage des fixations, graisser les molettes de serrage, vérifier le bon fonctionnement du système de crantage des écarteurs et du réglage en hauteur. Vérifier l'état des porte-mains.

Stockage :

Stocker le matériel en intérieur. La référence 3345A peut voir son encombrement réduit en repliant les pieds vers l'intérieur (largeur 900 mm) (V).

Encombrement au sol / masse :

Référence 3345A : 2500 x 2000 mm / 121 kg ou 2500 x 2610 mm / 134 kg (avec les rallonges); 2500 x 900 mm (pieds repliés) (V).

Référence 3355A : 2500 x 2000 mm / 113 kg ou 2500 x 2610 mm / 126 kg (avec les rallonges).

Accessoires :

Il est possible d'agrémenter la référence 3355A d'un chariot référence 3850 (compris dans la référence 3345A), ou d'utiliser le chariot amovible référence 3840 pour en faciliter le déplacement (compatible avec les barres parallèles et mixtes) (VI). La câblerie optionnelle Ref. 3292 (VII) offre plus de stabilité et de sécurité à l'utilisateur. Lorsqu'il n'y a pas de possibilité d'ancrage, un jeu de rallonges de pieds référence 3360 (C) offre un résultat satisfaisant (VIII).



Assembly :

1) do the frame assembling as indicated on I. Place the holes "O" in the inside of the frame and down as indicate on II, to mount the trolley (see instructions on the technical sheet n°21 supplied with the trolley Ref. : 3850).

2) fix the bracket as indicated on II, tighten firmly.

3) mount the rest of the equipment as indicated on III. Remove the cap out the higher upright and fix the brace with the hole "A" on every extremity as indicated on IV. The other holes allow to obtain a bigger space adjustment than the EN 915 norm.

NOTA : place the screws inside the frame and the nuts outside. Tighten firmly all the fixations.

Use instructions :

Height adjustment :

Upper hand rail between 2,10 to 2,45 m.

Lower hand rail between 1,40 to 1,75 m.

Space adjustment :

it can be done from 0,565 to 1,40 m.

NOTA : the adjustment must be similar for the two space adjusters.

It is possible to obtain 1,55 m if the braces are fixed with the hole "B" (the two braces must be installed the same way).

Maintenance :

Check regularly the tightening of the fixings, grease the knobs, check the good locking of the space adjusters and the height adjustments. Check the state of the hand rails.

Storage :

Store the equipment inside. The overall dimensions of Ref. 3345A can reduce when the foot are fold inside (width : 900 mm) (V).

Overall dimensions / weight :

Reference 3345A : 2500 x 2000 mm / 121 kg or 2500 x 2610 mm / 134 kg (with extensions); 2500 x 900 mm (folded foot) (V).


Reference 3355A : 2500 x 2000 mm / 113 kg or 2500 x 2610 mm / 126 kg (with extensions).

Accessories :

It is possible to mount the trolley reference 3850 on the reference 3355A (it is supplied with the reference 3345A), or use the foldable trolley reference 3840 to make the displacement easier (this trolley can be used with parallel bars and convertible bars) (VI). The optional cables Ref. 3292 (VII) offer more stability and safety for the user. If there is no possiblity to place anchorages, the extension foot reference 3360 (C) make a good result (VIII).



I Assemblage ch, ssis
Frame assembling

II Fixation des chapes
brackets fixing

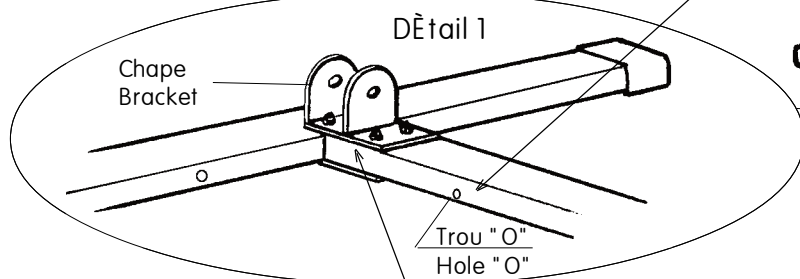

IV Montage des bracons
Brace mounting

III Montage de l'appareil
Apparatus mounting

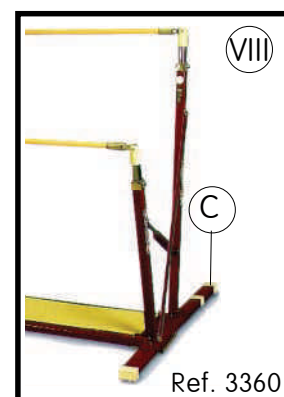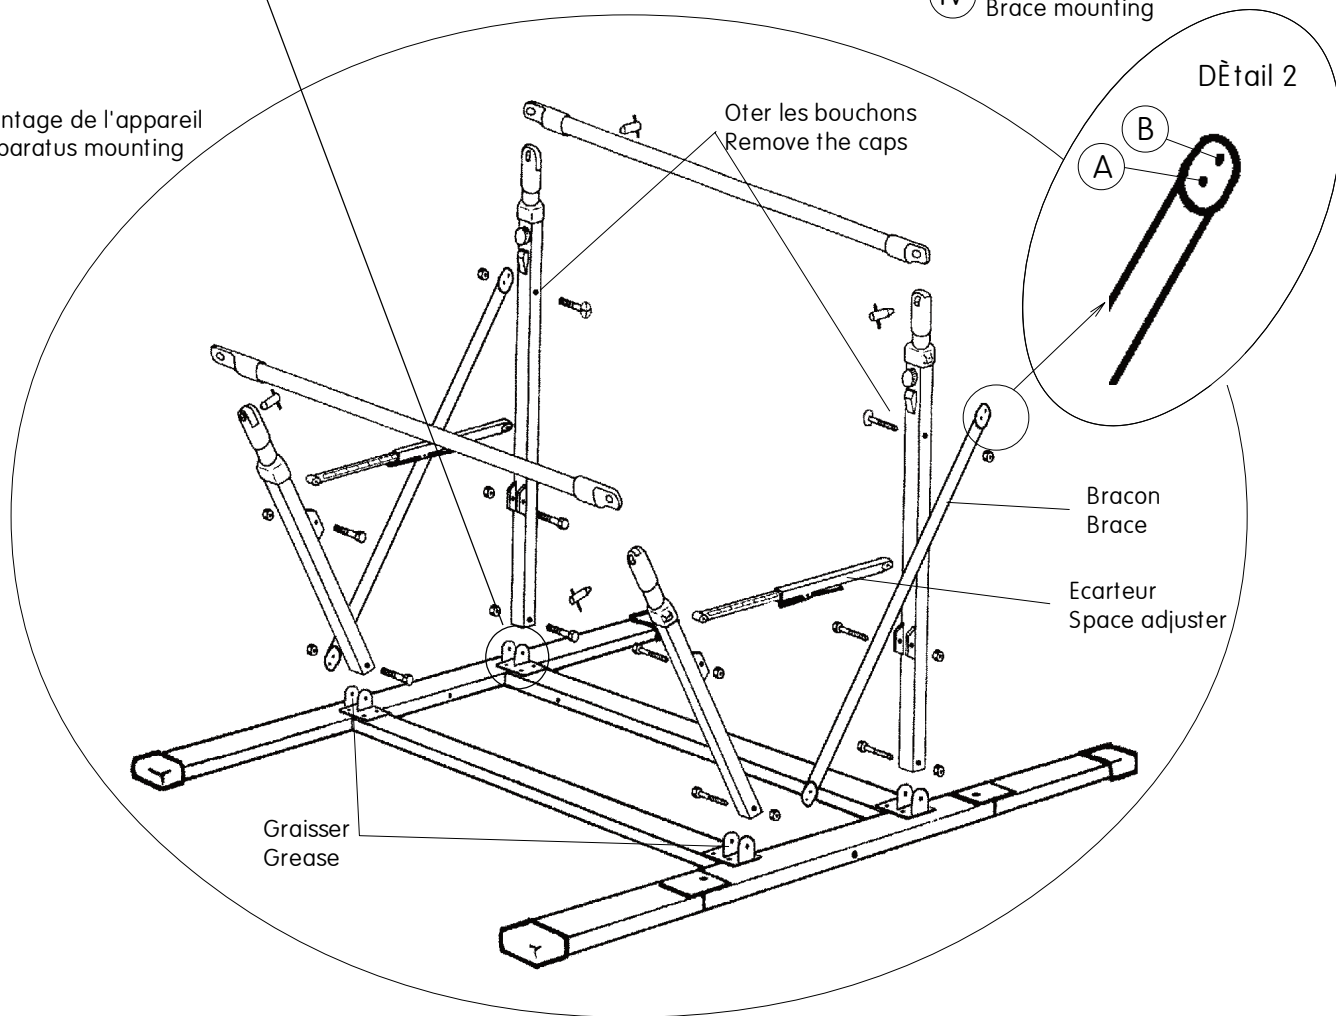

29	-	-	-	-	-
28	-	-	-	-	-
27	-	-	-	-	-
26	-	-	-	-	-
25	4	Écrou nylstop H M12	VEHF12000Z	-	-
24	2	vis H M12 x 100	VH0012100Z	-	-
23	22	Écrou borgne H M12	VEBR12000Z	-	-
22	4	vis Fhc M12 x 80	VFHC12080Z	-	-
21	2	vis poñ lier M12 x 80	VPOE12080Z	-	-
20	2	vis H M12 x 90	VH0012090Z	-	-
19	4	vis H M12 x 60	VH0012060Z	-	-
18	-	patin d'agrÈs 100 x 50	3800/07	avec vis	-
17	4	coulisse entr.	328/13	-	-
16	4	cliquet de crantage	333/09	-	-
15	4	molette de serrage	333/38	-	-
14	4	tasse aluminium	333/30	-	-
13	4	chape plastique	320/02	-	-
12	4	goupille porte-mains	322/13	-	-
11	2	porte-mains bois	3260	colis	-
10	2	petit Écarteur	329/01	-	-
9	2	bracon	3355/02	colis de 2	-
8	2	petit montant entr.	X328/10	-	-
7	2	grand montant entr.	X328/15	-	-
6	4	chape	X333/46	seule	-
5	4	bride de fixation simple	X380/48	seule	-
4	1	rallonges	3360	colis de 2	-
3	1	pied repliable	X391/20	colis de 2	-
2b	2	partie centrale pied repl.	X391/21	ref 391/20	-
2	2	pied fixe	380/19	colis de 2	-
1	1	longeron	380/18	colis de 2	-
REP	NBR	DESIGNATION	REFERENCE	OBSERVATION	







RUE GASTON DE FLOTTE
13012 MARSEILLE
 TÉL: 04-91-87-51-20 Fax: 04-91-93-86-89

BARRES ASYM. TRIQUES
A CHASSIS

PAR: P. PUGLISI
 LE: 21/10/98
 Éch:

Ref.: 3345A/3355A
 CE DOCUMENT EST LA PROPRIÉTÉ DE GYMNOMA. IL EST CONFIDENTIEL ET NE PEUT ÊTRE REPRODUIT

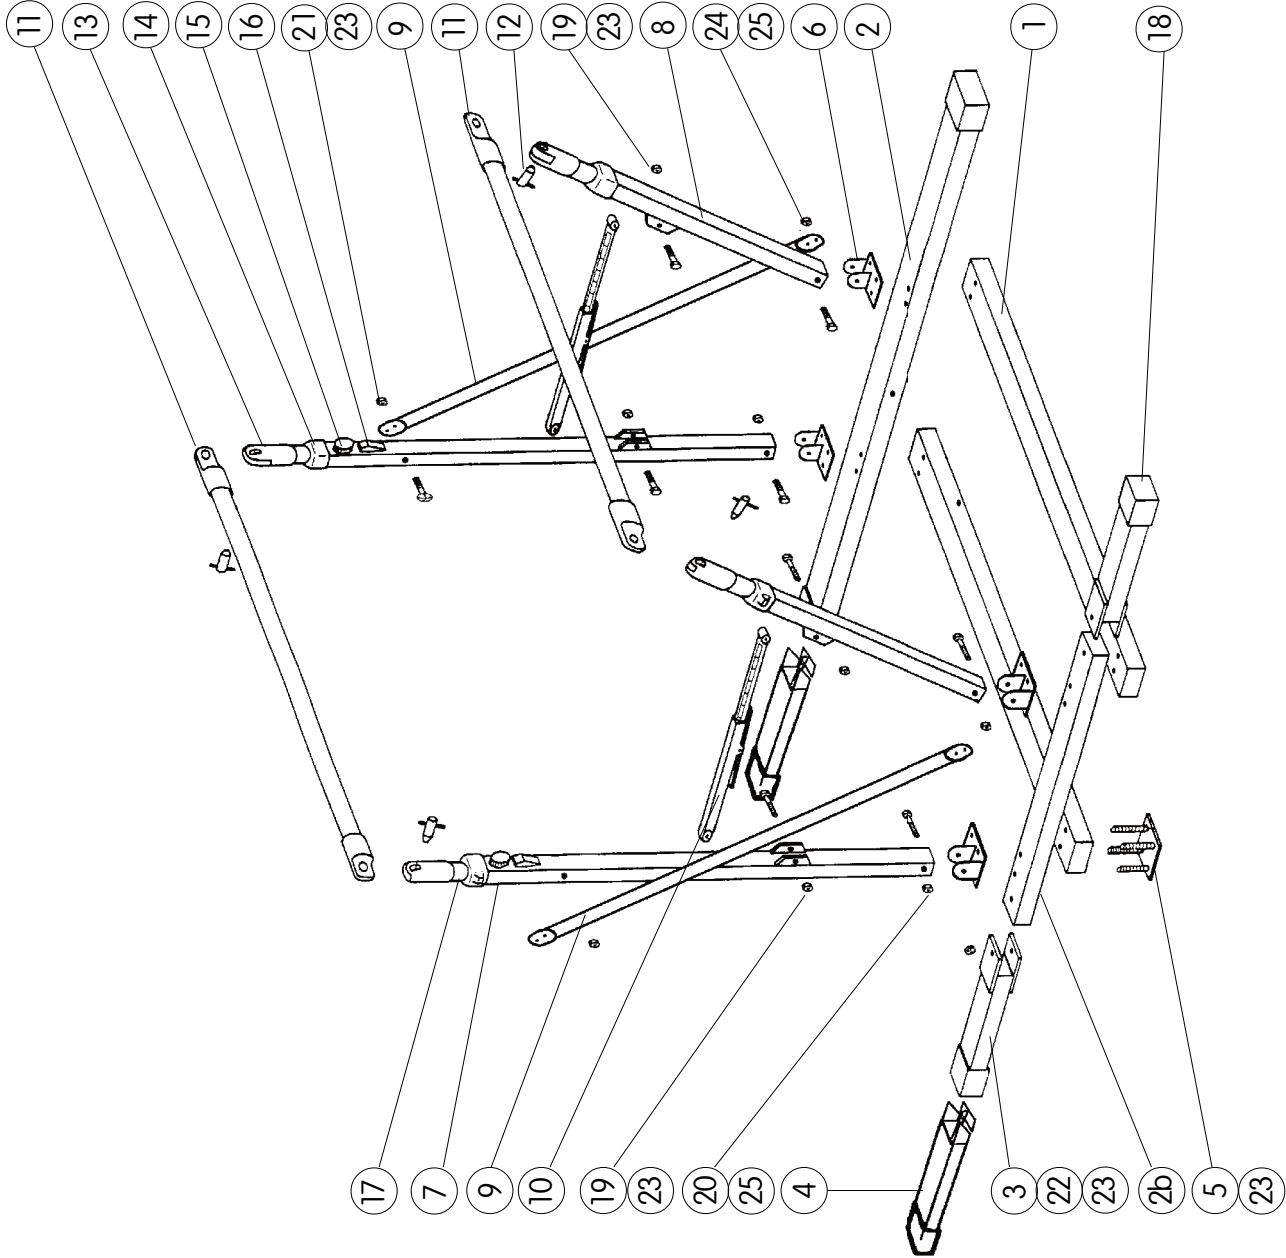

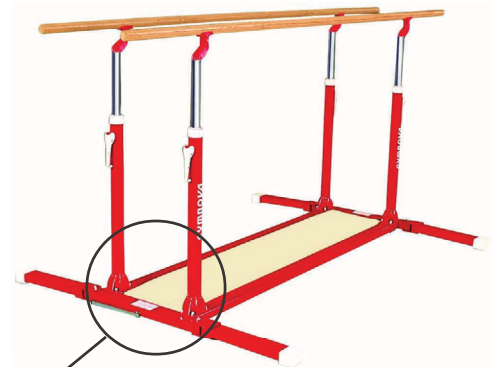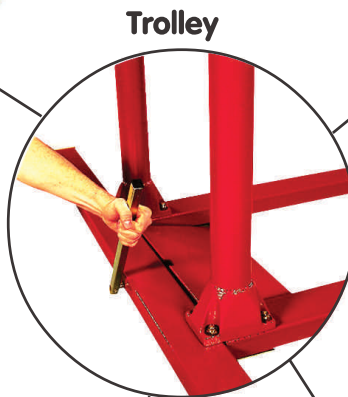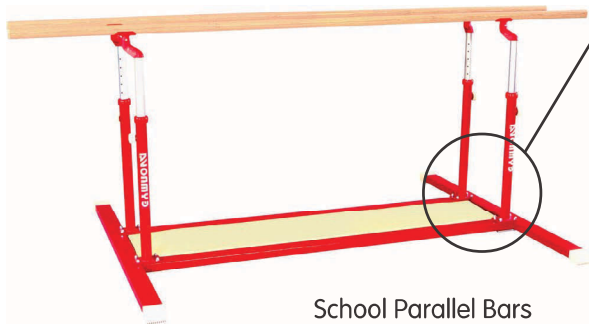**BUILT-IN PAIR OF TRANSPORT
TROLLEYS FOR FREESTANDING BARS****3850****KEEP THIS
DOCUMENT**Freestanding Asymmetric Bars
Ref.: 3345A, 3347, 3356 & 3357Parallel Bars for Training
Ref.: 3910, 3915, 3921 & 3925**Trolley**School Parallel Bars
Ref.: 3901, 3905, 3906 & 3907Mixed Bars
Ref.: 3380 & 3391**Warning:**

This equipment should be installed by a qualified individual.
The apparatus should only be used by one person at a time, under the supervision of a qualified individual.
Using this equipment for purposes other than those originally intended is not allowed.

Recommendations:

As shown in French Standard NF S52-400 the following is recommended:

- keep these instructions for subsequent reference (inspection, maintenance, etc.).
- periodically carry out predictive maintenance.
- depending on how much it is used, have the equipment serviced yearly or every few years.

Packaging:

1 Pack (ref. 3850): Pair of transport trolleys

Weight: 13 kg (28.66 lb) Dimensions: 510 x 290 x 120 mm (1.67 x 0.95 x 0.39 ft)

Volume: 0.018 m³ (0.6357 ft³)

Constantly aiming to improve our products, we reserve the right to make changes to the equipment and dimensions without further discussion.

I. Disassembling the Apparatus:

- 1 - In case of joint purchase, refer to section II.
- 2 - If the pair of trolleys has been purchased after the apparatus, the installation requires partly disassembling the apparatus frame: Disassemble all 4 uprights of the apparatus, then remove the legs (20) and spars (8) from the frame flanges (21).

II. Assembling the trolley:

- 1 - Insert each cam (1), into the hole of each leg (20). Insert one thrust washer (3), then the lever (4) horizontally onto the cam (1) as shown by **Figure 1**.
Important: it is imperative to observe the lever (4) assembly direction with regard to the cam, by setting the "pin" upward.
- 2 - Lock the assembly by inserting the screw (5) through the lever (4) and the cam (1), then fully tighten the assembly using the nut (6) (see **Fig. 1**).

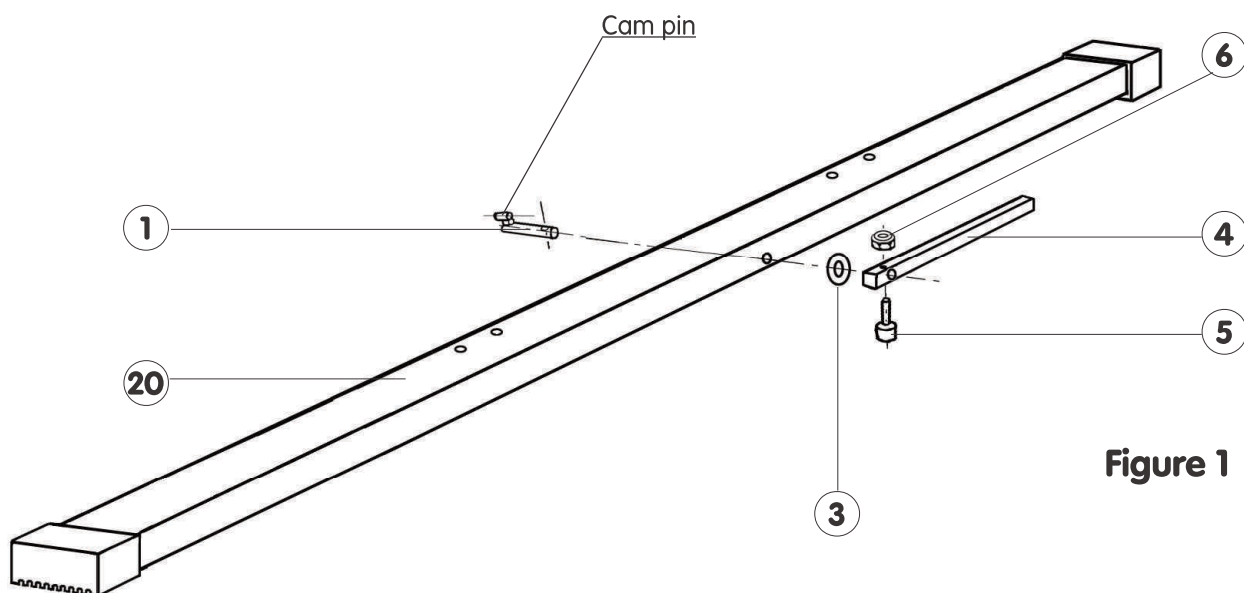


Figure 1

- 3 - Place the frame flanges (21) on the floor. Insert the spars (8) onto the flanges (see **Fig. 2**).
Important: hole "O" should imperatively be located downward and on the inner side of the frame.
- 4 - Brings the "spars (8) + flanges (21)" assemblies against both complete plates (18) by inserting the pivots "P" into the holes "O" (see **Fig. 2**).


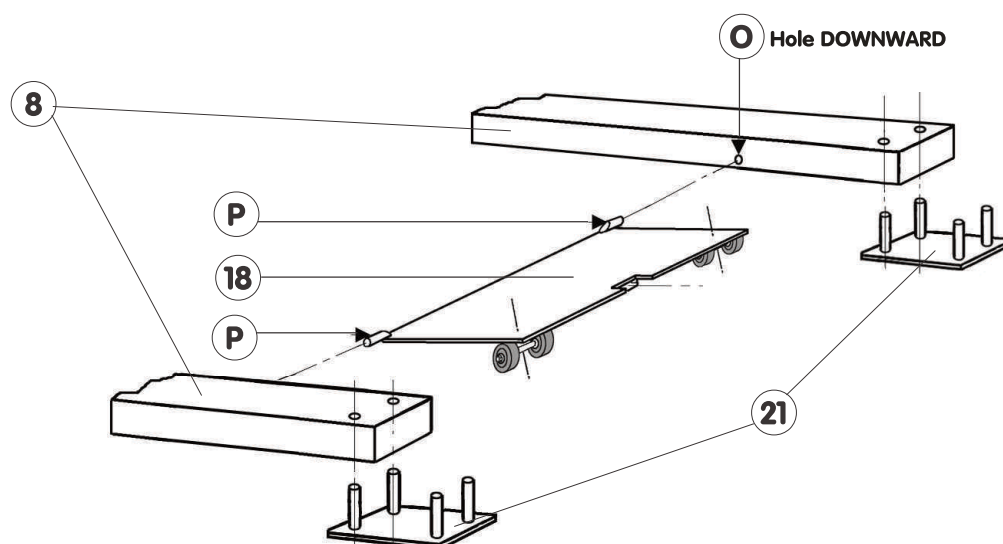


Figure 2

- 5 - Position each leg (20), slightly tilted at each end of the "trolley+spars+flanges" assembly resting on the floor, as shown by **Figure 3**.
- 6 - Insert the cam "pin" (1), previously lubricated, into the housing of the plate (18) (see **Fig. 3**). If necessary, slightly lift the trolley for easier assembly.
- 7 - Lower the assembly to insert the leg (20) onto the flanges (21) (see **Fig. 3**).
- 8 - The pair of trolleys then is in rest position.

Figure 3

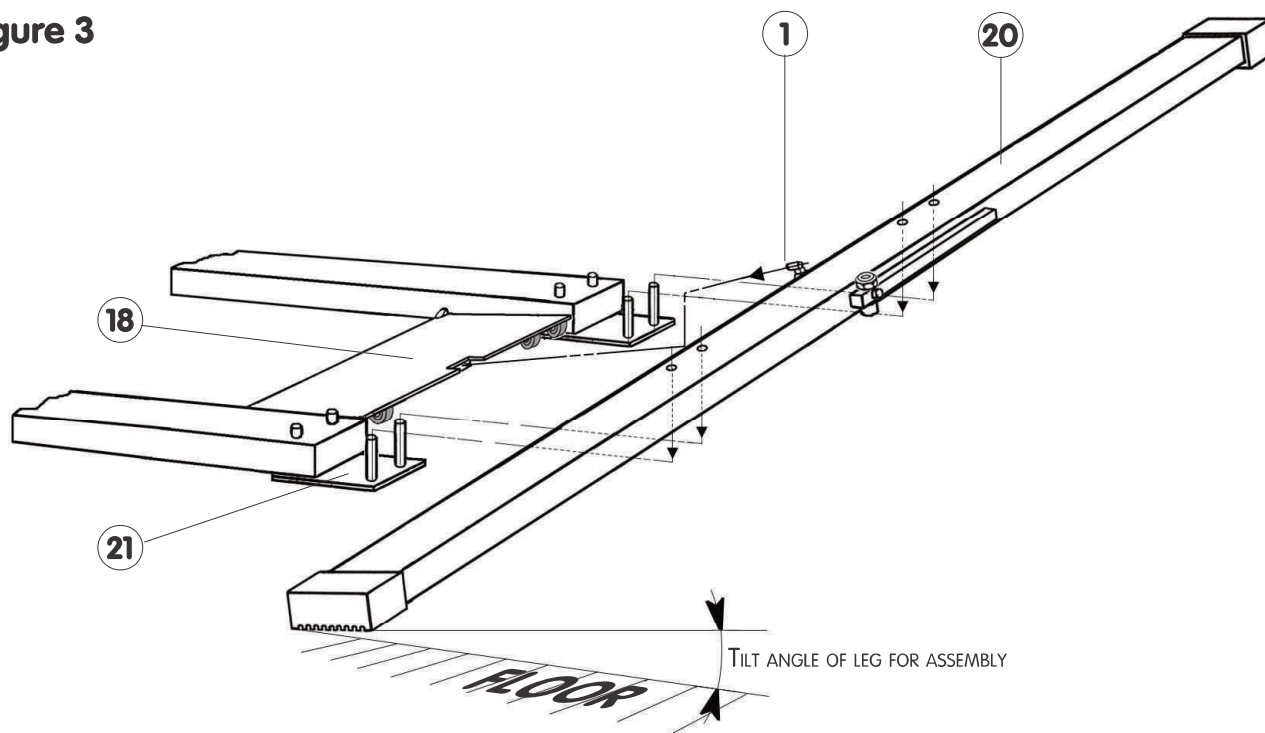

III. Assembling the apparatus:

- 1 - Freestanding Asymmetric Bars: Refer to the Assembly Instructions NM17.
- 2 - Parallel Bars for Training and Mixed Bars: Refer to the Assembly Instructions NM225.
- 3 - School Parallel Bars: Refer to the Assembly Instructions NM117.

IV. Usage:

1 - Activating the trolleys:

- Warning: it is recommended to support the levers (4) when rocking (this allows dampening the bump due to the apparatus weight), in order to avoid damaging the whole equipment.
- In order to set the apparatus on wheels, simply rock each lever (4) so that the trolley may come into contact with the floor by lifting the apparatus.
- Warning: check that the lever is actually abutting when rocking (far exceeding the vertical position) to allow for correct positioning of the trolley, i.e. in "work" position.
- For moving, simply push the apparatus fitted with the trolleys.

2 - Retracting the transport trolleys:

After moving the apparatus, set it back onto the floor, by folding the levers (4).

V. Maintenance:

- 1 - A regular cleaning of the apparatus allows better viewing of the problems, if any (distortion, breakage or corrosion).
- 2 - Before use, check wear parts and safety elements each time for good condition and operation:
 - wear of the cam (1), trolley plate (7), wheels (14), bearing system (18).
 - check the correct tightening of all attachment elements (5), (6) and (11).
- 3 - **Important:**
 - If a problem is detected or suspected, do not use the equipment as long as it has not been checked by a technician.
 - Any damaged or distorted piece should be replaced as soon as possible.

VI. Storage:

Always store the equipment away from humidity and heat.

29	-	-	-	-	-
28	-	-	-	-	-
27	-	-	-	-	-
26	-	-	-	-	-
25	-	-	-	-	-
24	-	-	-	-	-
23	-	-	-	-	-
22	1	Set of 4 stirrups + bearings	385/19	4 x Ref. 385/11	
21	-	Frame flange	-	-	
20	-	Frame leg	-	not provided	
19	2	Pair of levers with shafts	385/04	per pair	
18	1	Bearing Kit	3850/20	for 4 stirrups	
17	2	Complete plate	-	each	
16	4	Complete stirrup + bearings	385/11	each	
15	4	Complete stirrup	385/10	-	
14	8	Black 42 dia. wheel	GROU4208NO	included in (15)	
13	16	M8x18 flat washer	VRP008180Z	included in (15)	
12	4	Wheel support stirrup	-	included in (15)	
11	4	M12 H locknut	VEHF12000Z	included in (18)	
10	8	Needle thrust bearing, 1226	QRTA12026E	included in (18)	
10	16	Backplate, 1226	QCPL12026E	included in (18)	
9	4	M12x27 thrust washer	VRP012270Z	included in (18)	
8	-	Leg spar	-	not provided	
7	2	Trolley plate alone	-	painted	
6	10	M8 H locknut	VEHF08000Z	-	
5	2	M8x30 CHC screw	VCHC08030Z	included in (19)	
4	2	Lever	-	included in (19)	
3	2	14x27 Z flat washer	VRP014270Z	included in (19)	
2	4	Finned endpiece, 20x20	QEPA2020NO	included in (19)	
1	2	Cam	-	included in (19)	
ITEM	QTY	DESCRIPTION	REFERENCE		




RUE GASTON DE FLOTTE
13012 MARSEILLE
 Tél. : 33-(0)-4-91-87-51-20
 Fax : 33-(0)-4-91-93-86-89

BUILT-IN PAIR OF TRANSPORT TROLLEYS FOR FREESTANDING BARS

BY: E BRIEU DATE: 25/06/07 NW21e Ref.: 3850

THIS DOCUMENT IS THE PROPERTY OF GYMNOVA. IT IS CONFIDENTIAL AND SHALL NOT BE REPRODUCED WITHOUT PRIOR AUTHORIZATION.

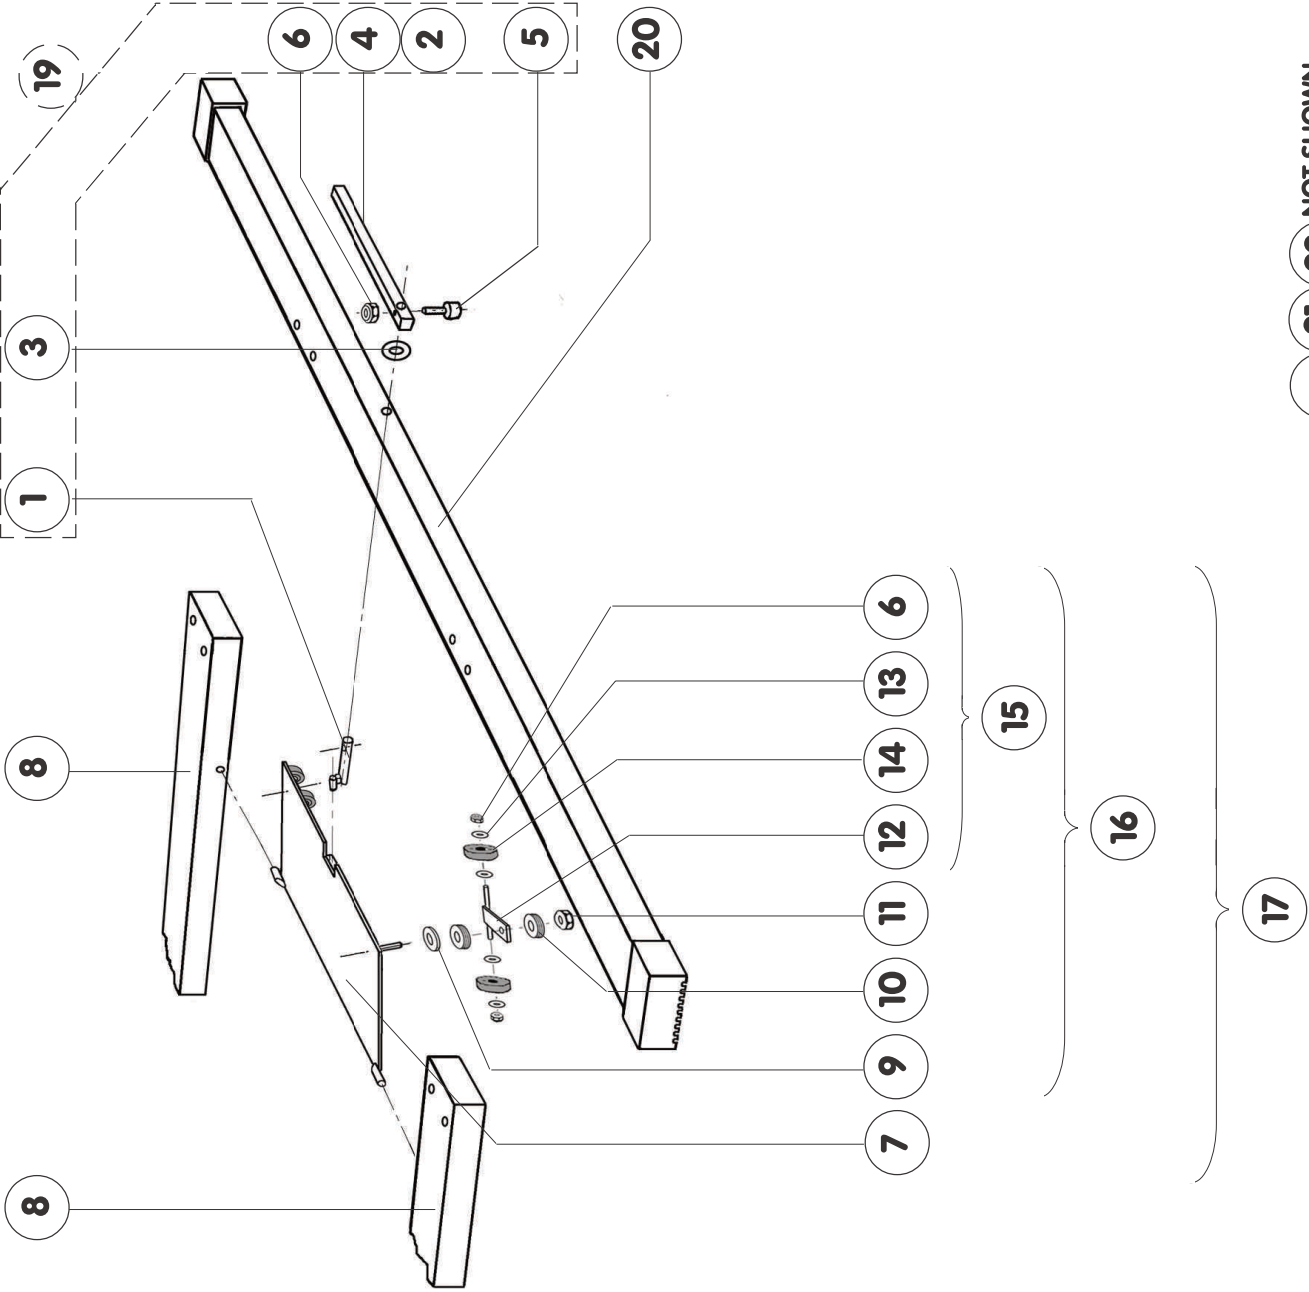

18 21 22 NOT SHOWN

To order spare parts, provide the description, part no., and delivery date of the entire apparatus.



INTEGRATED FOLDABLE MAT FREESTANDING BARS

**3347 - 3357 - 3905
3907 - 3915 - 3925
7080**

Ref.: 3347 & 3357

Ref.: 3905, 3907, 3915 & 3925

KEEP THIS
DOCUMENT

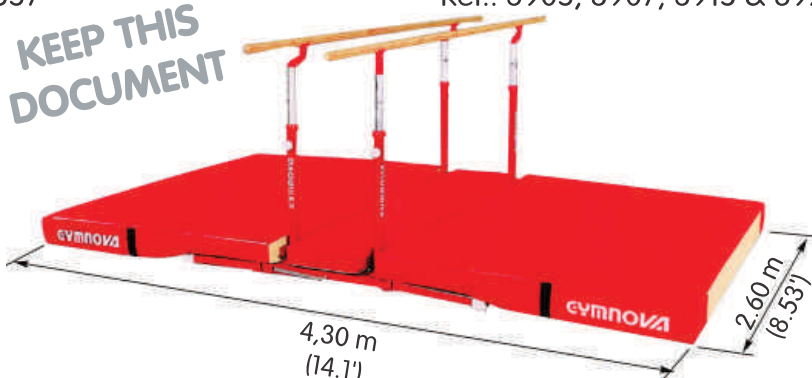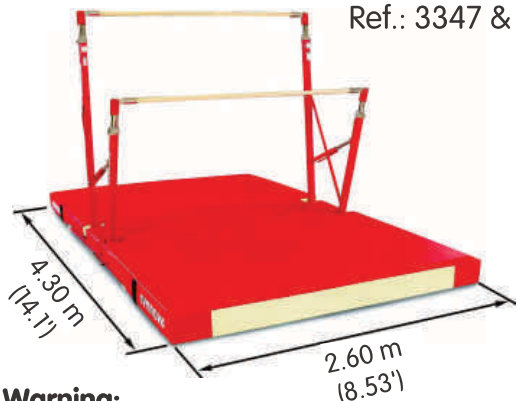

Warning:

This equipment should be installed by a qualified individual. The apparatus should only be used by one person at a time, under the supervision of a qualified individual. Using this equipment for purposes other than those originally intended is not allowed. The integrated foldable mat is designed to be used with the GYMNOVA freestanding bars only.

Compliance:

The integrated foldable mat (ref.: 7080) complies with the requirements of the European standard EN 12503-1 "Sports mats - Part 1: Gymnastic mats, safety requirements". This equipment is classified as type 7: "Safety mats for difficult exercises"

Recommendations:

As shown in French Standard NF S52-400 the following is recommended:

- keep these instructions for subsequent reference (inspection, maintenance, etc.).
- periodically carry out predictive maintenance.
- depending on how much it is used, have the equipment serviced yearly or every few years.

Packaging:

Ref.	3347 Folding legs asym. bars + mat	3357 Fixed legs asym. bars + mat	3905 Fixed legs school // bars + mat	3907 Foldable legs school // bars + mat	3915 Foldable legs practice // bars + mat	3925 Fixed legs practice // bars + mat	7080 Integrated foldable mat	Volume (ft³) Weight (lb) Dimensions (ft)
Packages								
380/18 Pair of freestanding bar spars	1	1	1	1	1	1	-	1.307 72.753 9.19 x 0.39 x 0.36
380/19 Fixed legs for freestanding bars	-	1	1	-	-	1	-	1.271 61.729 6.63 x 0.49 x 0.39
391/20 Foldable legs for freestanding bars	1	-	-	1	1	-	-	1.73 70.548 6.66 x 0.66 x 0.39
327/00 4 asymmetric bar spars, M'97	1	1	-	-	-	-	-	2.896 72.753 6.76 x 0.66 x 0.66
3900/04 Pair of uprights for school // bars	-	-	2	2	-	-	-	2.225 35.274 4.07 x 0.75 x 0.72
380/34 Pair of uprights for practice // bars	-	-	-	-	2	2	-	1.271 61.729 3.97 x 0.66 x 0.49
380/37 Simple attaching flanges	-	-	1	1	1	1	-	0.141 11.023 0.62 x 0.52 x 0.43
333/99 Spreaders+plates+asym. bar flanges, M'98	1	1	-	-	-	-	-	1.059 44.092 2.33 x 0.69 x 0.66
3355/02 Braces for asym. bars, M'98	1	1	-	-	-	-	-	0.318 8.8185 5.02 x 0.33 x 0.2
3850 Transport trolleys for freestanding bars	1	1	1	1	1	1	-	0.636 28.66 1.67 x 0.95 x 0.39
3260/02 Pair of hand-rails for asym. bars, M'05	1	1	-	-	-	-	-	0.883 15.432 8.2 x 0.46 x 0.23
386/01 Pair of hand-rails for parallel bars	-	-	1	1	1	1	-	1.307 24.251 11.7 x 0.49 x 0.23
7082 Built-in side mat	2	2	2	2	2	2	2	33.196 57.32 8.53 x 5.9 x 0.66
7083 Built-in central mat	1	1	1	1	1	1	1	12.713 28.66 8.53 x 2.3 x 0.66
No. of Packages	10	10	10	10	10	10	3	

I. Assembling the Apparatus:

- Freestanding asymmetric bars with fixed legs (**ref.: 3356**) and foldable legs (**ref.: 3345**): Refer to the Assembly Instructions NM17.
- Mixed bars with fixed legs (**ref.: 3391**) and foldable legs (**ref.: 3380**): Refer to the Assembly Instructions NM225.
- School parallel bars with fixed legs (**ref.: 3901**) and foldable legs (**ref.: 3906**): Refer to the Assembly Instructions NM117.

II. Installing the integrated foldable mat (two people recommended):

Note: Prepare a clean area for assembling the mat.

- 1 - Position the central mat (**1**) between the 4 uprights (**7**) of the freestanding bars. Then center it on the frame.
- 2 - Position each side mat (**2**), connecting skirt side, against the central mat (**1**). Align the side mats (**2**) with the central mat (**1**).
- 3 - Fold the connecting skirt (**3**) of each side mat (**2**) onto the female Velcro of the central mat (**1**).
- 4 - When the connecting skirt is attached, check that the side mat (**2**) is fully applied against the central mat (**1**). Re-adjust and tighten the connecting skirt (**3**) if required.

III. Folding and storing the apparatus with integrated mat (two people recommended):

- 1 - For asymmetric bars only, adjust each spreader (**5**) to the minimum position and fully insert the sliding tubes (**6**) into the uprights (**7**).
- 2 - Lift each side mat (**2**) against the uprights (**7**) (see **Fig.1**).
- 3 - Attach each side mat (**2**) to the uprights (**7**) using the black Velcro tapes (**4**) (see **Fig.3, 4 and 5**): keep each side mat (**2**) applied against the uprights (**7**) by tightening the Velcro tapes (**4**).
- 4 - Install the apparatus on the transport trolleys, lifting the levers (**8**) on the frame sides.
- 5 - For freestanding bars with foldable legs only, fold the 4 legs against the spars.
- 6 - Store the apparatus in the desired location. When moving, handle the apparatus with folded mat with special care, in order to avoid rocking.
- 7 - When unfolding the integrated mat, perform the same operations in reverse order.

VERY IMPORTANT:

- Never fold or unfold the integrated mat when the apparatus is positioned on the transport trolleys: always perform these operations when the apparatus is resting on the floor, on its pads.
- For freestanding bars with foldable legs, never fold or unfold the mat when the legs are folded against the spars: always perform these operations when the legs are extended.

Figure 1

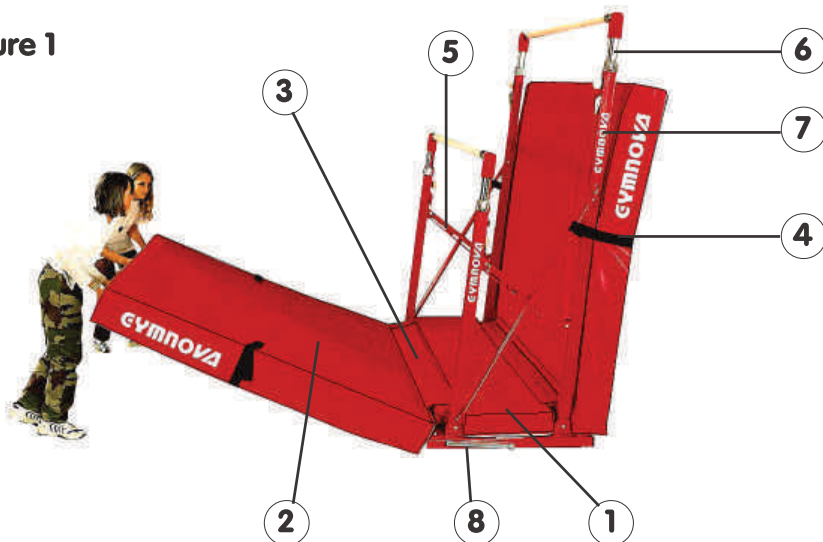


Figure 2



Figure 3

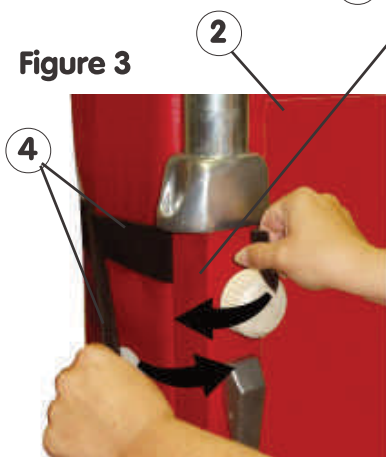


Figure 4



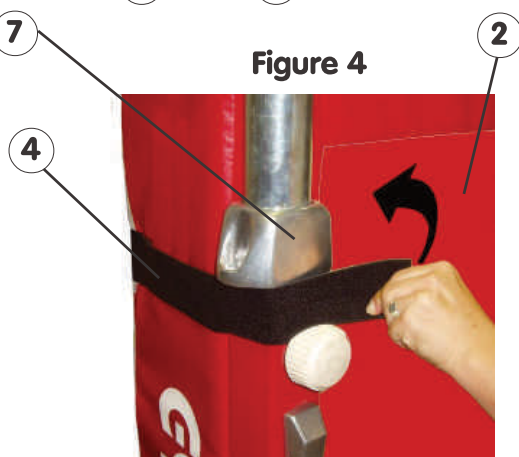



Figure 5

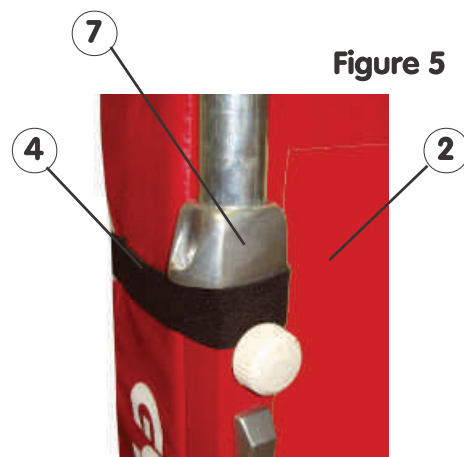


IV. Overall size:

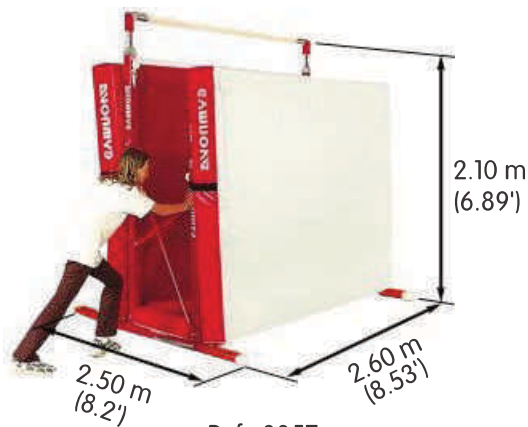


Ref.: 3357
FOLDED

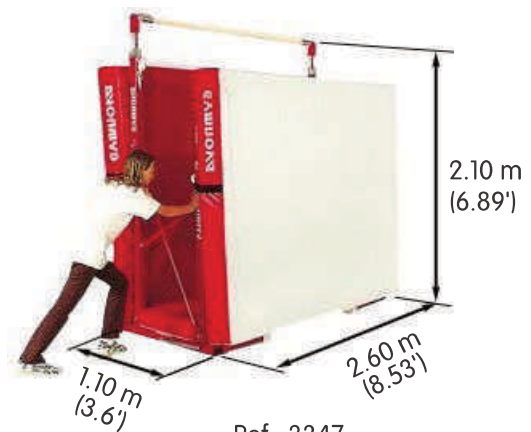

Ref.: 3347
FOLDED

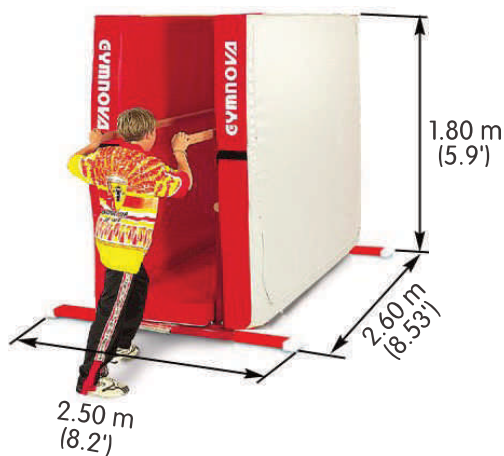

Ref.: 3905 & 3925
FOLDED

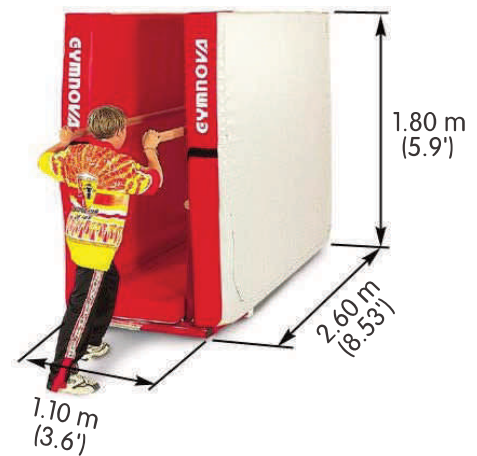

Ref.: 3907 & 3915
FOLDED

V. Usage (warranty validity):

This apparatus is for practice only. For safety reasons, it should never be used as a competition apparatus.

VI. Maintenance:

- 1 - A regular cleaning of the apparatus allows better viewing of the problems, if any (distortion, breakage or corrosion).
- 2 - Before use, check wear parts each time for good condition and operation: connecting skirts (3) and black Velcro tapes (4) of the side mats (2).
- 3 - **Important:**
 - If a problem is detected or suspected, do not use the equipment as long as it has not been checked by a technician.
 - Any damaged or distorted piece should be replaced as soon as possible.

VII. Storage:

Always store the equipment away from humidity and heat.

30	-	-	-	-	-
29	-	-	-	-	-
28	-	-	-	-	-
27	-	-	-	-	-
26	-	-	-	-	-
25	-	-	-	-	-
24	-	-	-	-	-
23	-	-	-	-	-
22	-	-	-	-	-
21	-	-	-	-	-
20	-	-	-	-	-
19	-	-	-	-	-
18	-	-	-	-	-
17	-	-	-	-	-
16	-	-	-	-	-
15	-	-	-	-	-
14	-	-	-	-	-
13	-	-	-	-	-
12	-	-	-	-	-
11	-	-	-	-	-
10	-	-	-	-	-
9	-	-	-	-	-
8	-	-	-	Transport trolley lever	-
7	-	-	-	Freestanding bar upright	-
6	-	-	-	Asym. bar sliding tube	-
5	-	-	-	Asym. bar spreader	-
4	-	-	-	Black Velcro tape	-
3	-	-	-	Connecting skirt	-
2	2	-	-	Built-in side mat	7082 pack
1	1	-	-	Built-in central mat	7083 pack
ITEM	QTY	DESCRIPTION	REFERENCE	REMARKS	




RUE GASTON DE FLOTTE
13012 MARSEILLE
Tél. : 33-(0)-4-91-87-51-20
Fax : 33-(0)-4-91-93-86-89

INTEGRATED FOLDABLE MAT

FREESTANDING BARS

BY: E BRIEU	DATE: 12/06/07	NIM232	Ref.: 3347 - 3357 - 3905 - 3907 - 3915 - 3925 - 7080
-------------	----------------	--------	--

THIS DOCUMENT IS THE PROPERTY OF GYMNOVA. IT IS CONFIDENTIAL AND SHALL NOT BE REPRODUCED WITHOUT PRIOR AUTHORIZATION

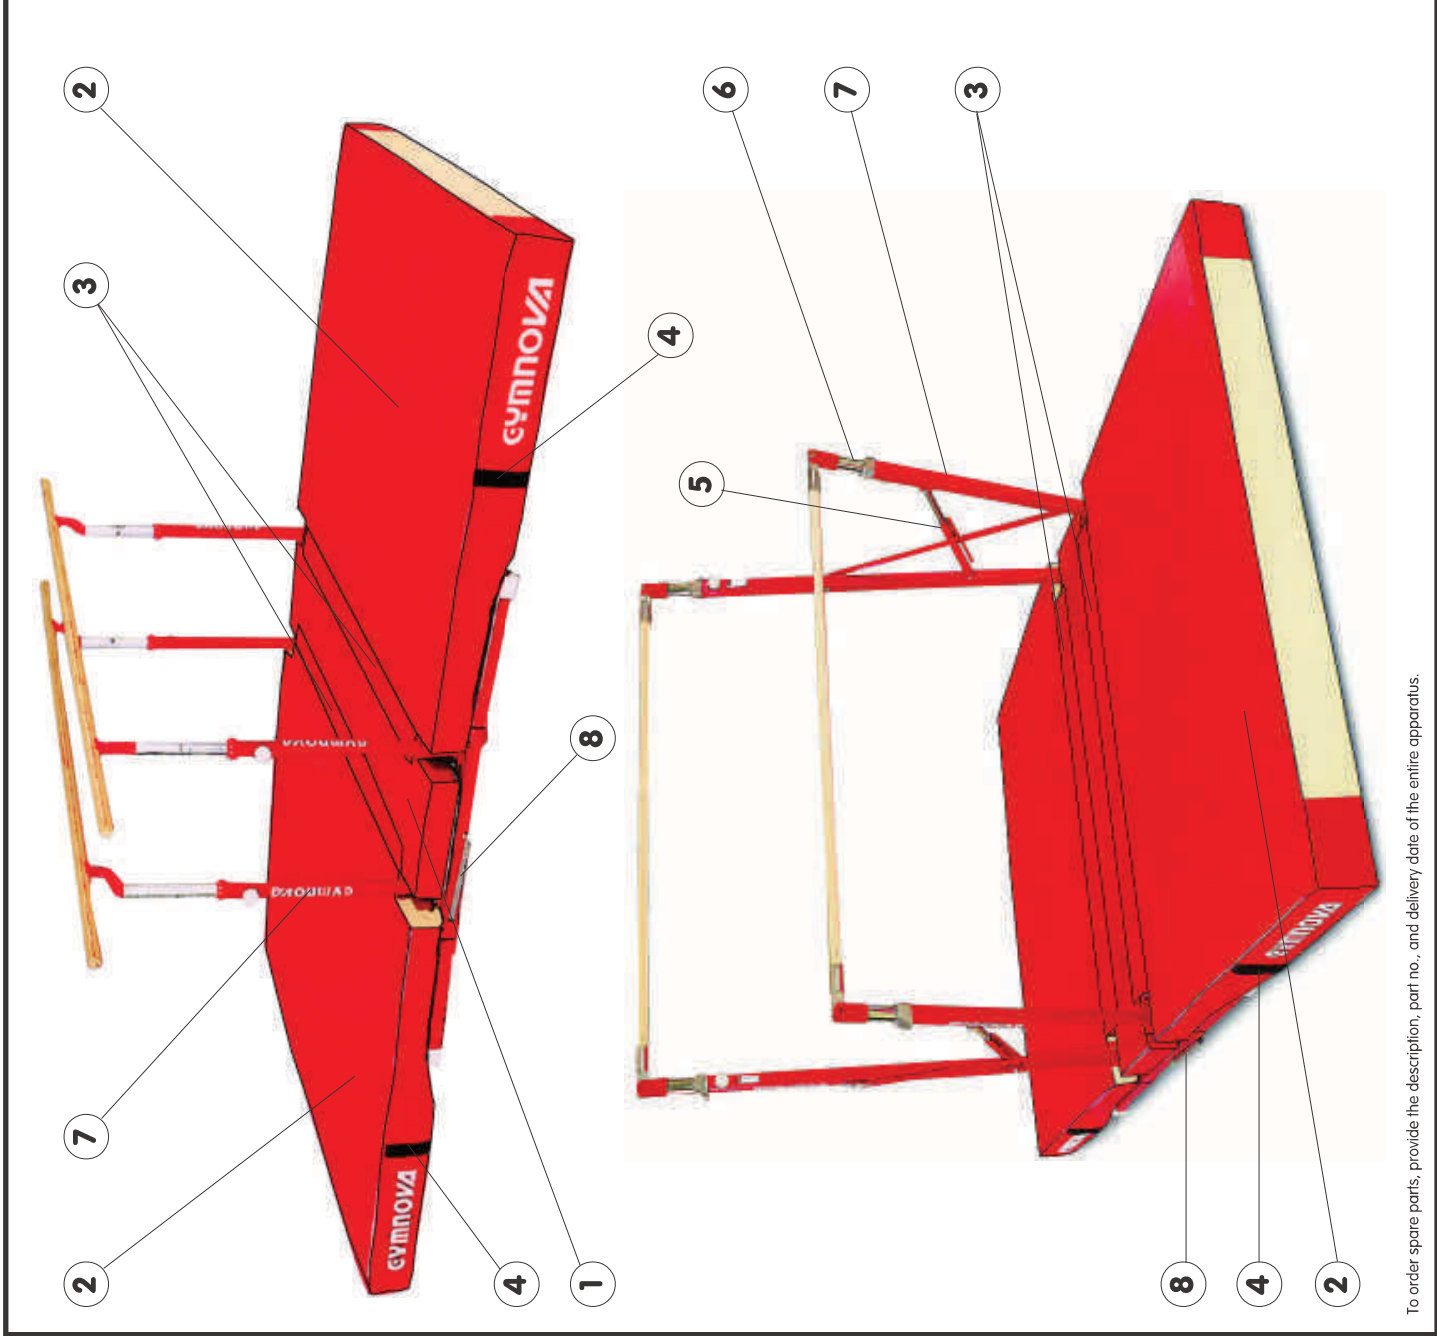

To order spare parts, provide the description, part no., and delivery date of the entire apparatus.