

VAULTING TABLE

CENTRAL FOOT M'14

3451C & 3401A
3451C & 3403A
3402

PLEASE KEEP
THIS DOCUMENT



Adjustment limits:

Height Min: 1 m

Max: 1.35 m



Warning:

Only qualified personnel may install this equipment.

Constant supervision by qualified personnel is required when using this equipment by only one person.

Do not use this equipment other than for its initial purpose.

It's forbidden to use this equipment on its trolleys.

Recommandations:

The French standard NF S 52-400 advises:

- to preserve this sheet for ulterior needs (checking, maintenance...).

- to periodically perform preventive maintenance;

- to carry out an inspection once a year or more according to the use.

Use:

Feet of Vaulting Table **Ref.: 3401A & 3403A** fit with the Vaulting Table body **Ref.: 3451C**. In order to increase stability, the foot **Ref.:**

3401A is equipped of a floor anchors system. The use of trolley (**Ref.: 3408**) ensure an easy movement. Foot protection **Ref.: 3402** (sold separately) fit with feet of vaulting table **Ref.: 3401A & 3403A** and is strongly advised.

Packing details:

Ref.	Package	3401/00 Central foot upright + slide	3403/10 Edge of the Pit Feet base	3401/50 Standard feet base	3402 Complete Protection	Number of packages
3401A Fixed table Central feet		1	-	1	-	2
3403A Fixed table On edge of the pit		1	1	-	-	2
3402 Complete Protection		-	-	-	1	1
Volume (m³) Weight (kg) Dimensions (mm)		0.05 27 740 x 260 x 260	0.08 20 700 x 330 x 330	0.09 22 1140 x 930 x 90	0.13 5 670 x 360 x 540	

Tools needed:

Flat key 14mm

Socket wrench 18mm


Socket wrench 19mm

Allen key N°5




I. Assembly of the interface on the body (Réf.: 3451C).


central notches indicate the
front of the body

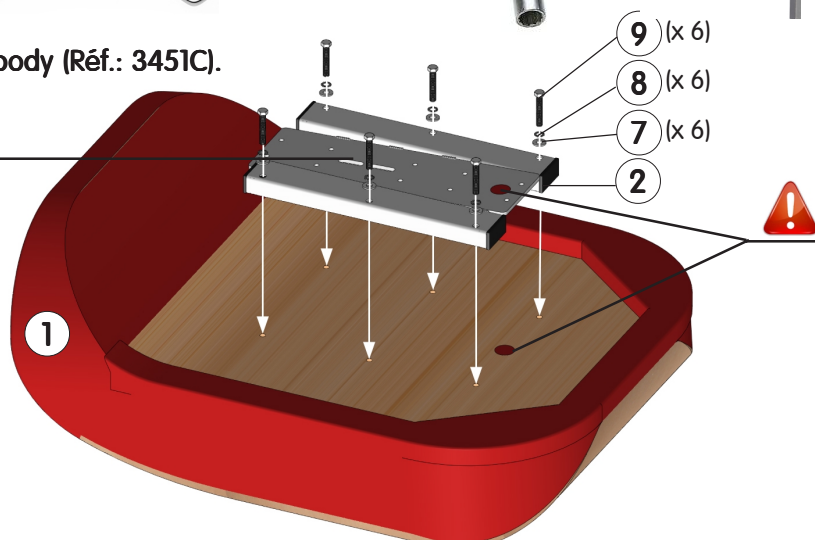

II. Assembly of the Central Foot on the Base (Ref.: 3401A): minimum.



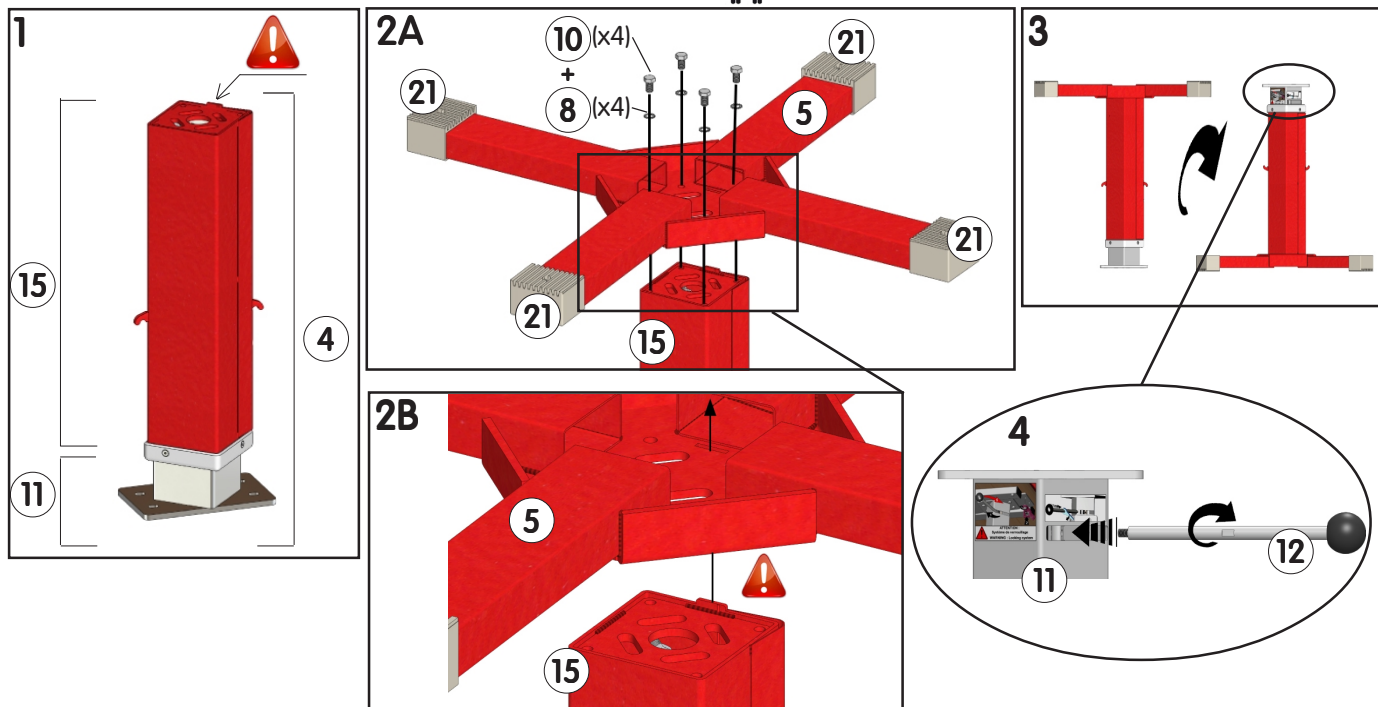


III. Assembly of the Edge of the Pit Foot and Base (Réf.: 3403A): minimum.

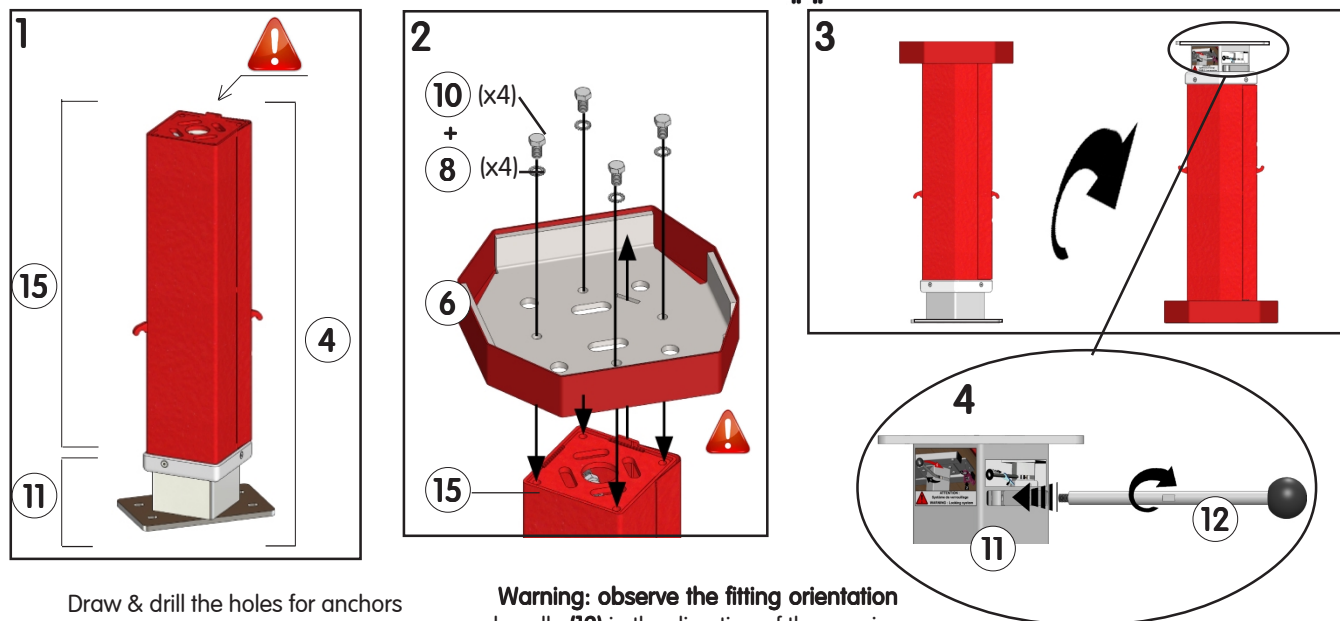


Draw & drill the holes for anchors following the dimensions below.

Warning: observe the fitting orientation handle (12) in the direction of the running track.

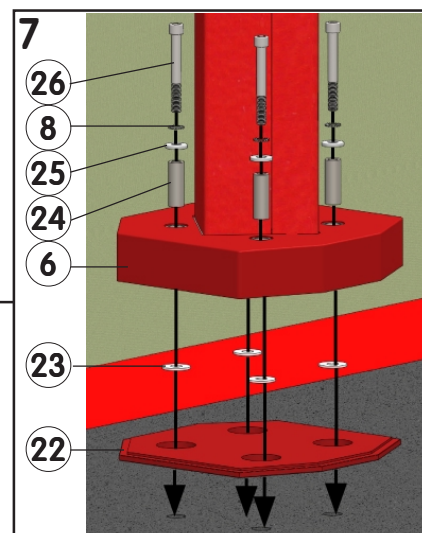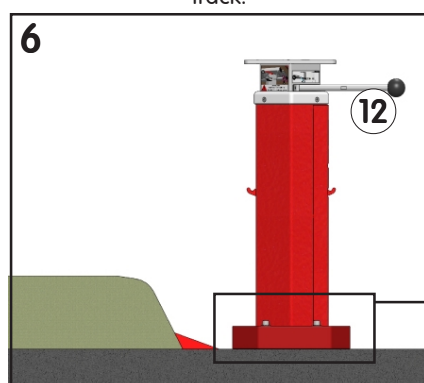
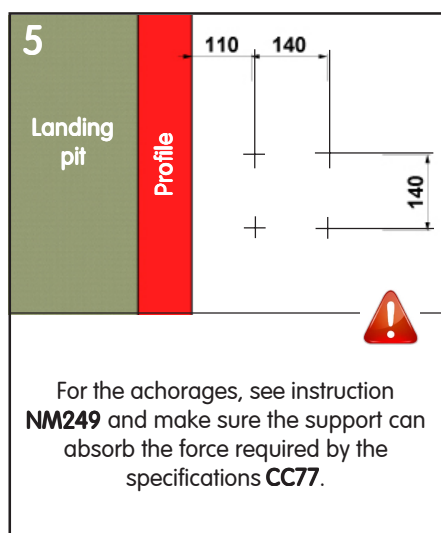


IV. Assembly of the body & the locking system on the Central Foot (Ref.: 3401 A& 3403A): min.

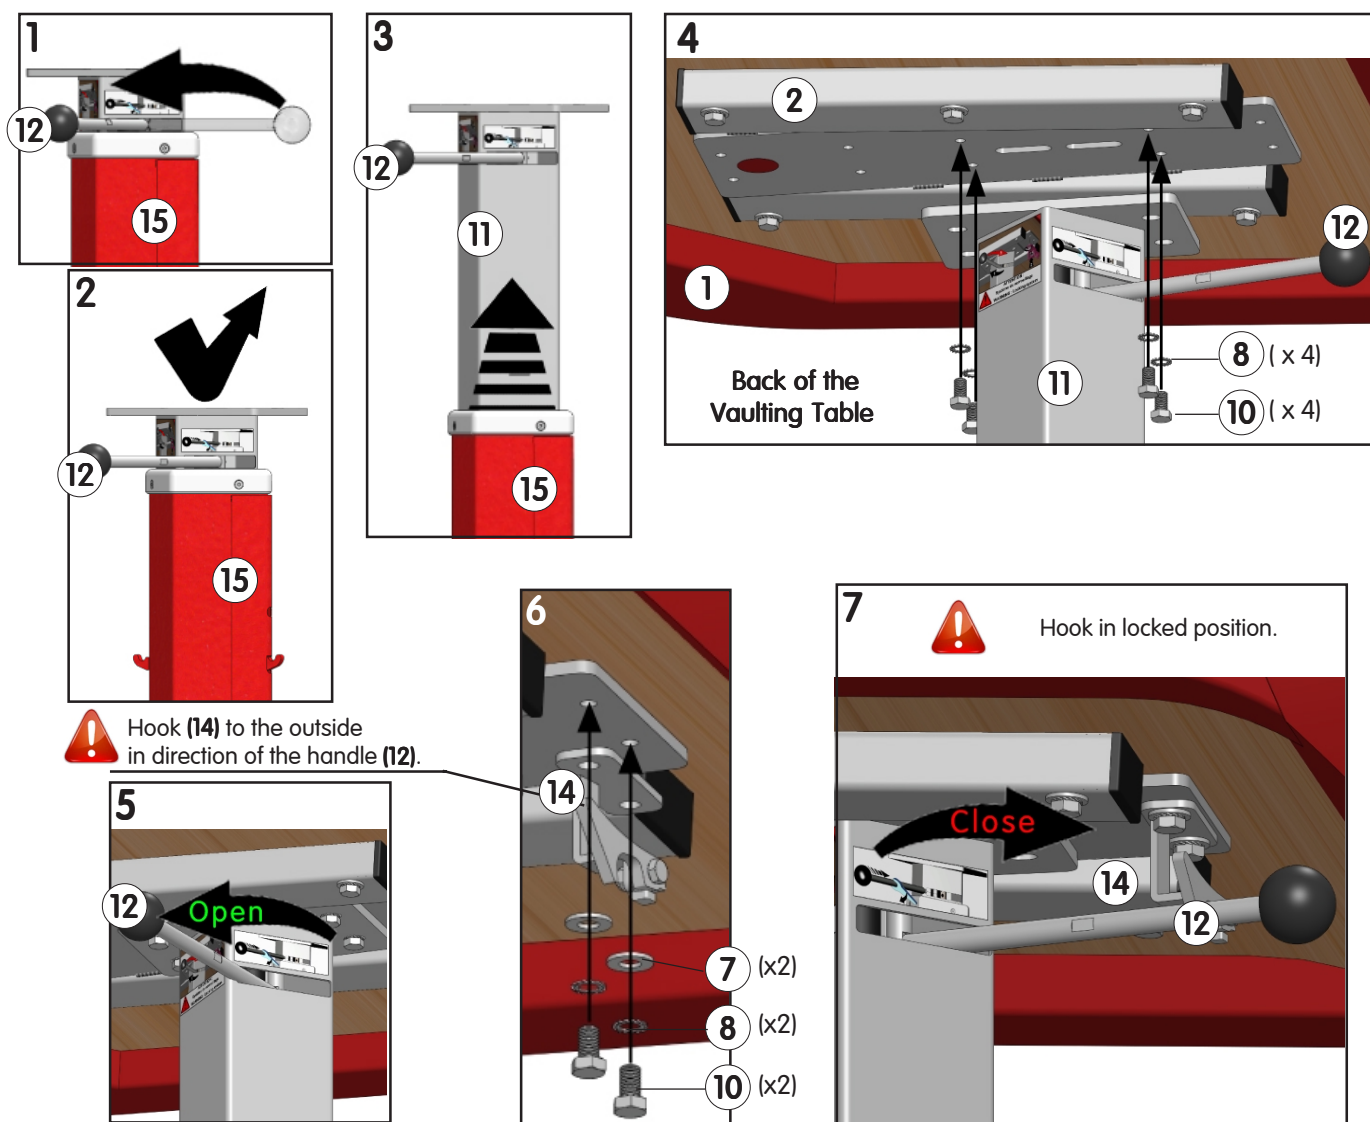






V. Fitting the Floor Anchoring system (Ref.: 3401A)

The vaulting table must be fastened to the ground to meet the requirements of FIG and European EN 913 safety standards.

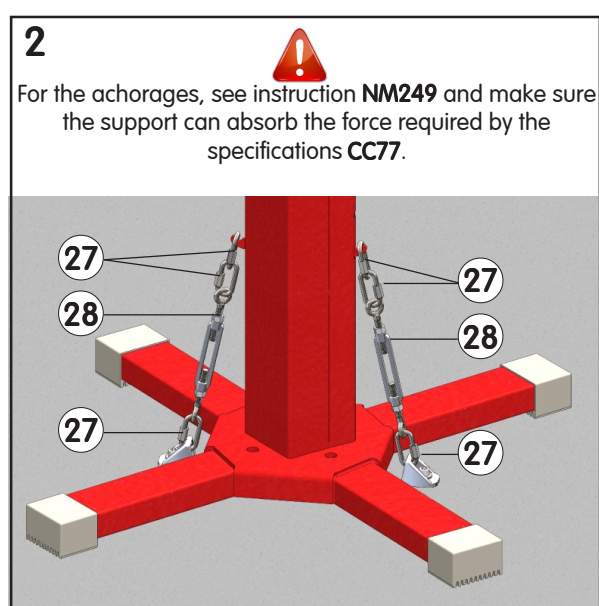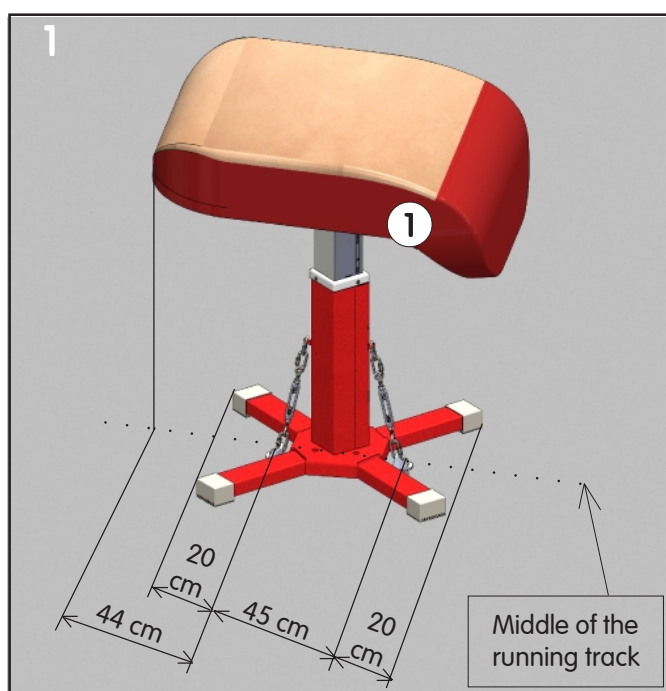


VI. Assembly of the Central Foot Protection (Ref.: 3402, on the Central Foot Refs.: 3401A or 3403A):

Location of the 50mm Adhesive Velcro (20).
Allows the attach of the high protection (18).

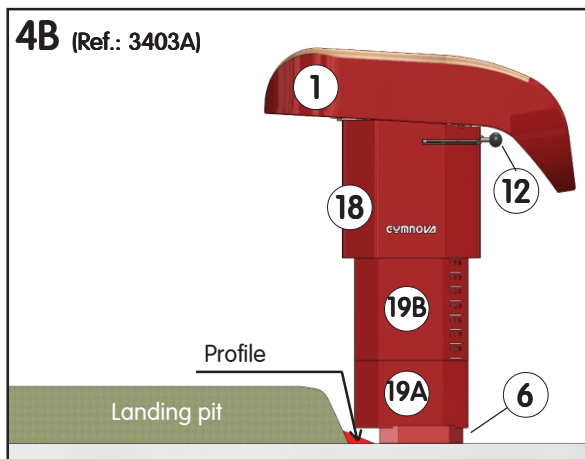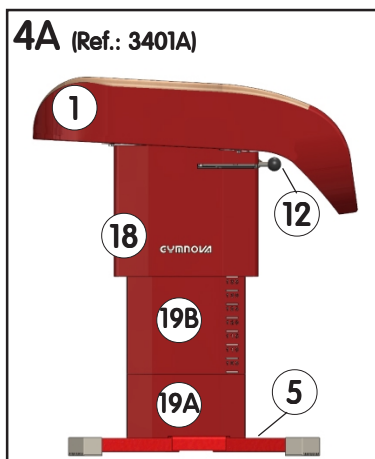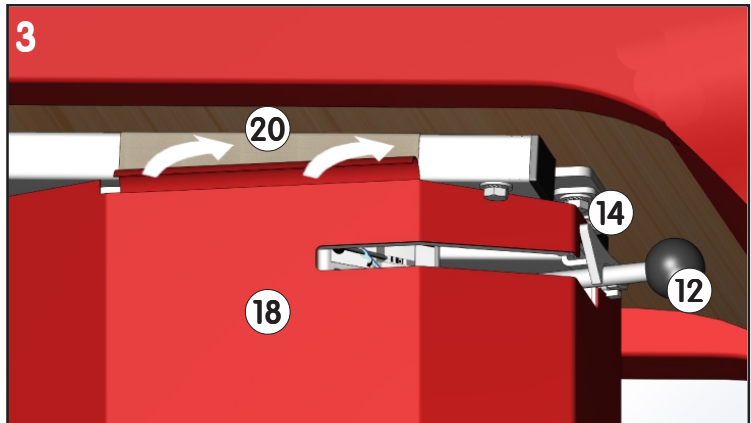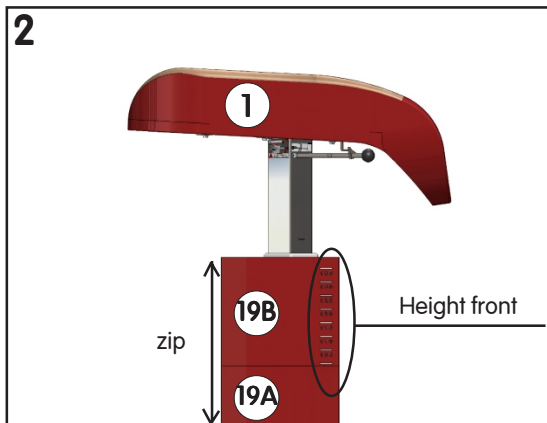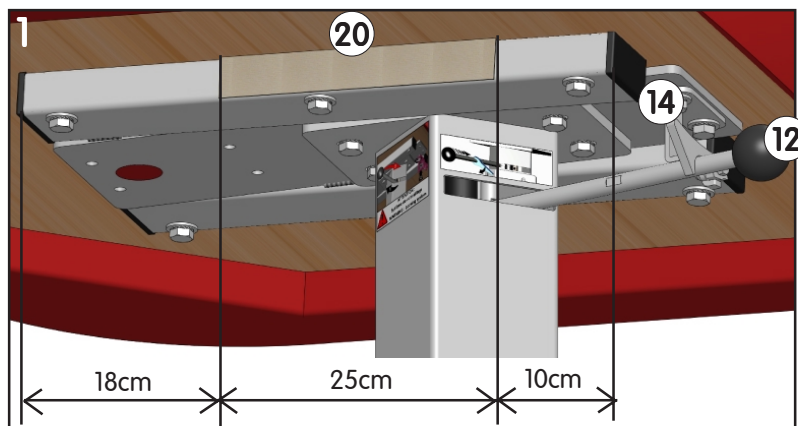

VII. Setting the height:

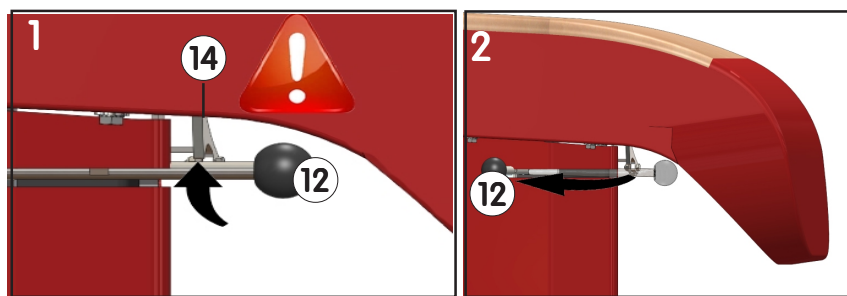

3 How to raise the height

Push on the table to unblock the catch, then adjust at the right height.



4 How to lower the height




5

Reached height indicate on the protection









6

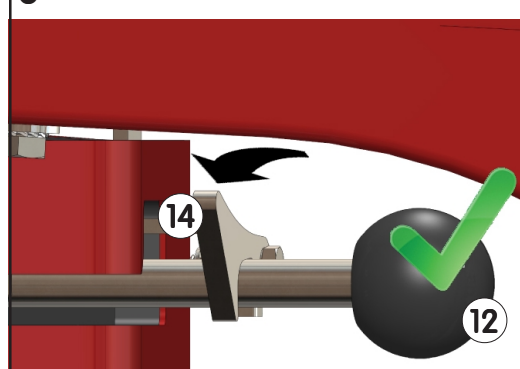


VII. Maintenance:

- 1/ It is recommended to check the tightness of the mounts, adjustment mechanisms and joints as well as the state of the pads, handles and protections, each time the equipment is used.
- 2/ **Important:** it is possible that after several weeks of intensive use, the handle lock to easily and/or the body moves sideways. The handle doesn't ensure an optimum lock. It is now necessary to adjust the locking system : remove the protections (18) & (19A, 19B) and position the vaulting table at the marks indicated on the slider by two lines (11) (height 1m30) then follow the instructions below.

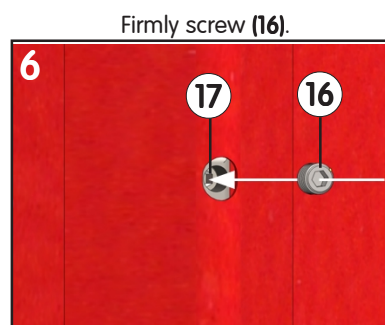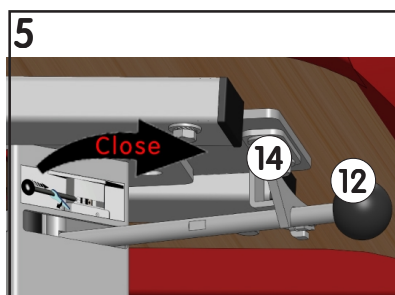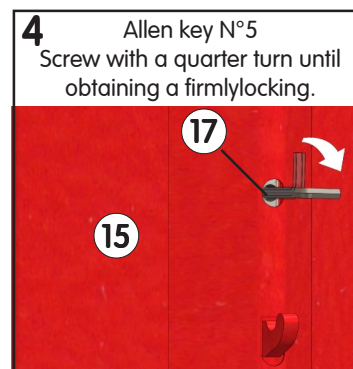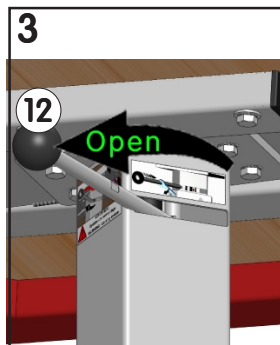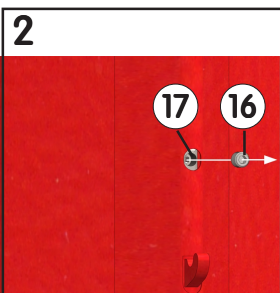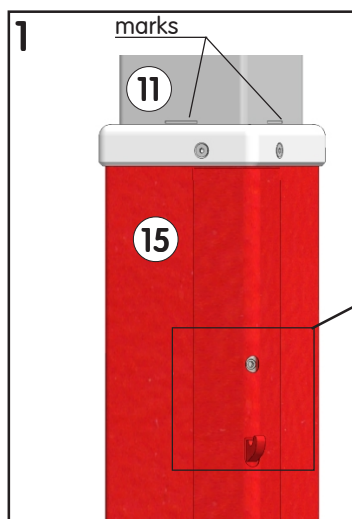

Firmly screw (16).

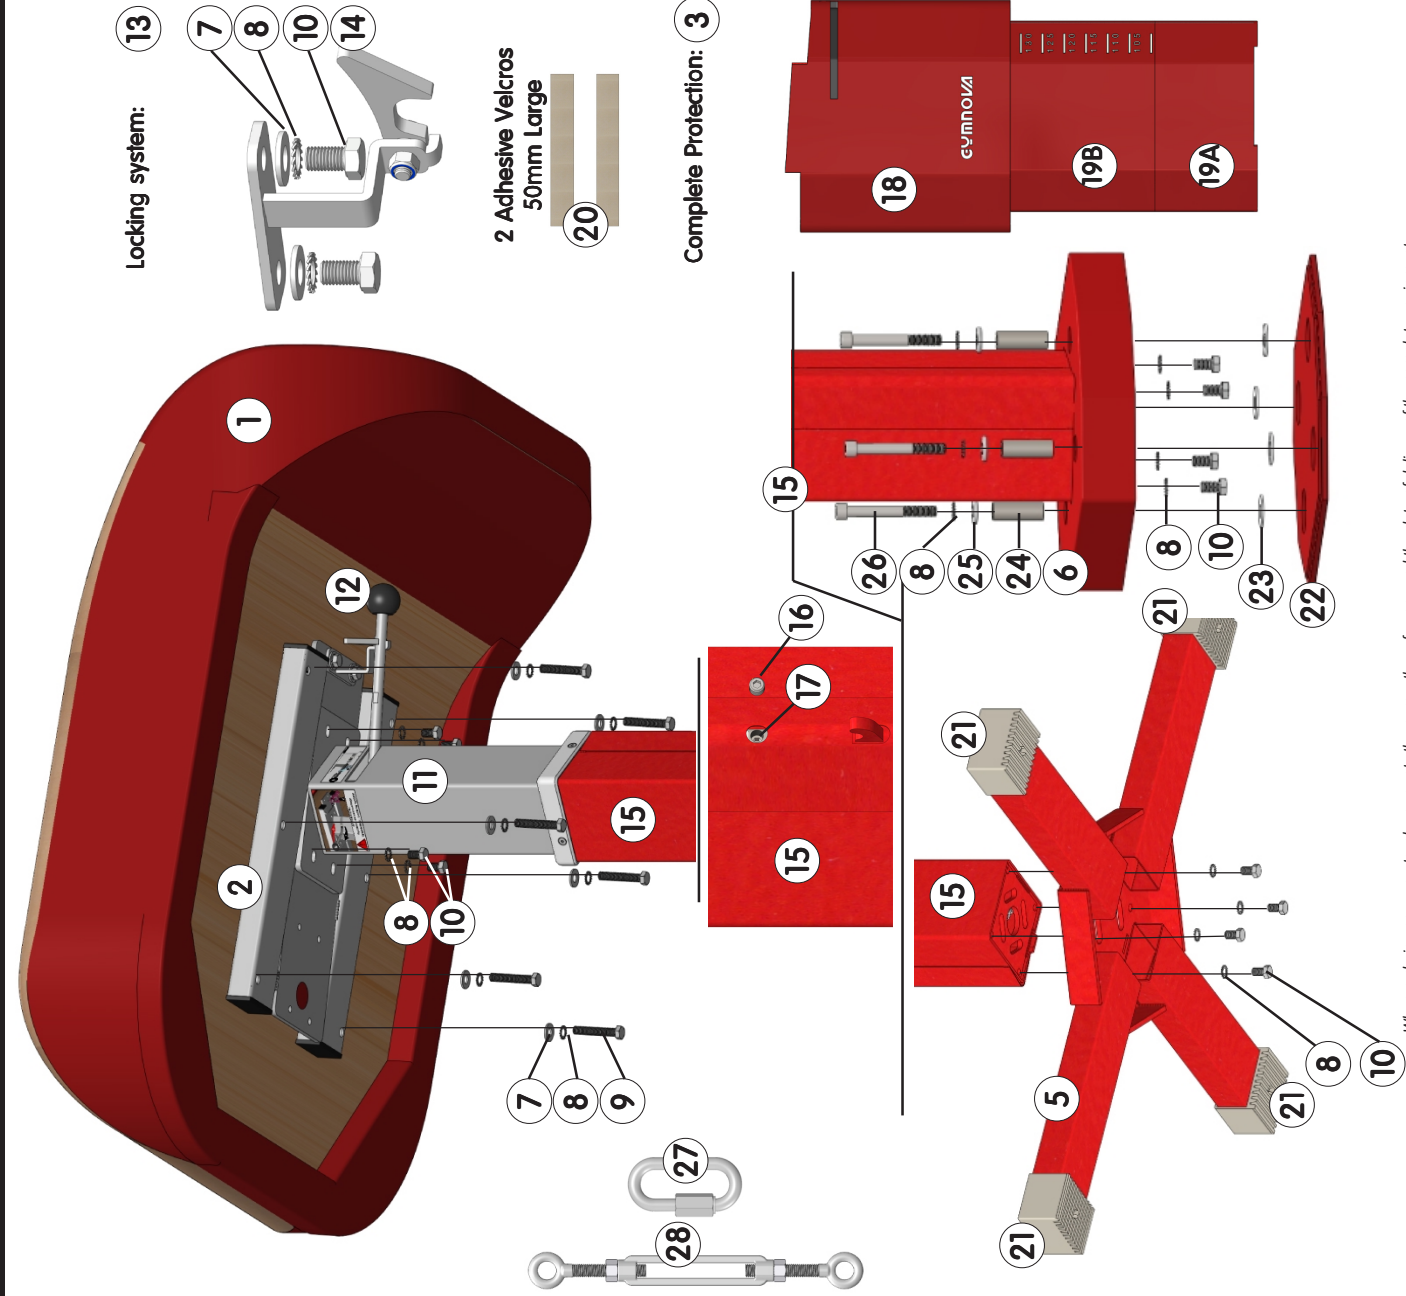

29	-	-	-	-
28	2	Turnbuckle	QTELE1012G	included in 5
27	6	Quick link N°8	QMRAG0008Z	included in 5
26	4	Screw CHC M12x100 PF	VCHC12100PF	included in 6
25	4	Flat washer 12x28 th.4	VRP122804Z	included in 6
24	4	Base's spacers	3403/03	included in 6
23	4	Flat washer M14 x 36	VRP014360Z	included in 6
22	1	Edge of the pit Plate	3403/14	included in 6
21	4	Non slip pad	3800/07	included in 5
20	2	Adhesive Velcro 50mm	-	25cm incl. in 3
19B	1	Middle protection	-	-
19A	1	Low protection	-	-
18	1	Hight protection	3402/30	included in 3
17	1	Adjustent screw	-	included in 4
16	1	Screw HC M10x10	VHCF10010N	included in 4
15	1	Feet (only)	-	included in 4
14	1	Locking hook	-	included in 13
13	1	Locking system	3401/30	included in 4
12	1	Handle	3401/25	included in 4
11	1	Slider (only)	-	included in 4
10	8	Screw H M12x20	VH0012020Z	included in 2
9	6	Screw H M12x70 PF	VH0012070Z	included in 2
8	16	Locking washer M12x20	VREET12200Z	included in 2 & 4
7	8	Flat washer M12x27	VRP012270Z	included in 2 & 4
6	1	Edge of the Pit Base M'14	-	3403A
5	1	Central feet Base M'14	-	3401A
4	1	Feet & Slider M'14	-	3401A & 3403A
3	1	Complete Protection M'14	3402	-
2	1	Table Interface	3451/20	complete
1	1	Vaulting Table Body M'13	3451/70	Package
REP	NBR	DESIGNATION	REFERENCE	OBSERVATION



RUE GASTON DE FLOTTE
13012 MARSEILLE
Tél. : 33-(0)-4-91-87-51-20
Fax : 33-(0)-4-91-93-86-89

VAULTING TABLE CENTRAL FOOT M'14

PAR : M. CHARB.	LE : 07/04/15	NM264A-GB	Ref.: 3451C & 3401A - 3403A - 3402
CE DOCUMENT EST LA PROPRIETE DE GYMNOVA. IL EST CONFIDENTIEL ET NE PEUT ETRE REPRODUIT SANS NOTRE ACCORD			

When ordering spare parts, please quote the name, the reference and the date of delivery of the complete equipment.