

## Readjusting the leg brace of the trampoline Ultimate




Checking the pretension	. 2
Readjusting the pretension of the leg brace	. 2





## **Checking the pretension**

Pull each leg braces of the unfolded trampoline out of its anchorage on the legs (Easy-Lock-System) and proceed as follows:

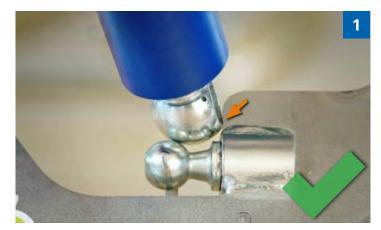



- Check the position of the ball socket while pulling the leg brace down until it is at one level with the ball and the ball socket should touch the metal (see arrow). The leg brace with the ball socket should always pull itself towards the ball by its own pretension.
   As long as this pretension is there it will prevent the ball socket system from opening up and there is no need to do any further adjustments.
- Should the pretension no longer exist or the ball socket does not touch the metal, as shown in figure 2, you will have to readjust the leg brace as per following description.




Hint: scan the QR-code to watch a video instruction.

## Readjusting the pretension of the leg brace



 Loosen both allen screws on the small leg brace.

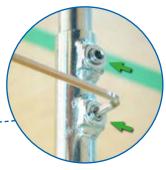





• Move the ball socket against the metal plate above the ball.



 Now push down the metal sleeve of the big leg brace towards the blue handle piece. You may take a rubber mallet to do so.



• Tighten both allen screws of the small leg brace while still pushing the leg brace up against the metal plate.



• Once the screws are tightened the leg brace should stay right above the ball and ball socket should touch the metal (see arrow).





 To set up the trampoline properly you need to connect the leg braces with the leg by grabbing the leg brace at the blue handle piece and slightly pushig it besides the ball then, then pulling it back so the ball is completely covered by the ball cup.



## If you have any questions, contact us any time::

Eurotramp Trampoline - Kurt Hack GmbH
Zeller Straße 17/1; 73235 Weilheim
Tel. +49 (0)7023 - 9495-0 | Fax +49 (0)7023 - 9495-10
welcome@eurotramp.com | www.eurotramp.com